



Dinosaur Electronics

PO Box 1263, 1160 SE 27th St.

Lincoln City, OR 97367

Ph. (541) 994-4344 Fax: (541) 994-2796

Pinouts for the 300-1073/4950 Board

(without attached wire harness and connector)

1	←	GND	6A	→	Run light / Hour meter
1A	→	GND	7	→	Start solenoid
2	←	Stop from remote switch	8	←	Generator (24 VAC)
3	←	Start from remote switch	9	→	Fuel pump solenoid and Ignition
4		Not Used	10	←	K1 contacts
5	←	(+) From voltage regulator	11	←	Battery (+)
5A	←	(+)V From voltage regulator	12	←	Low oil pressure switch
6	→	Run light / Hour meter			

